


はたらく機械が大好きです。



BM1000G

▶全体図(単位: mm)

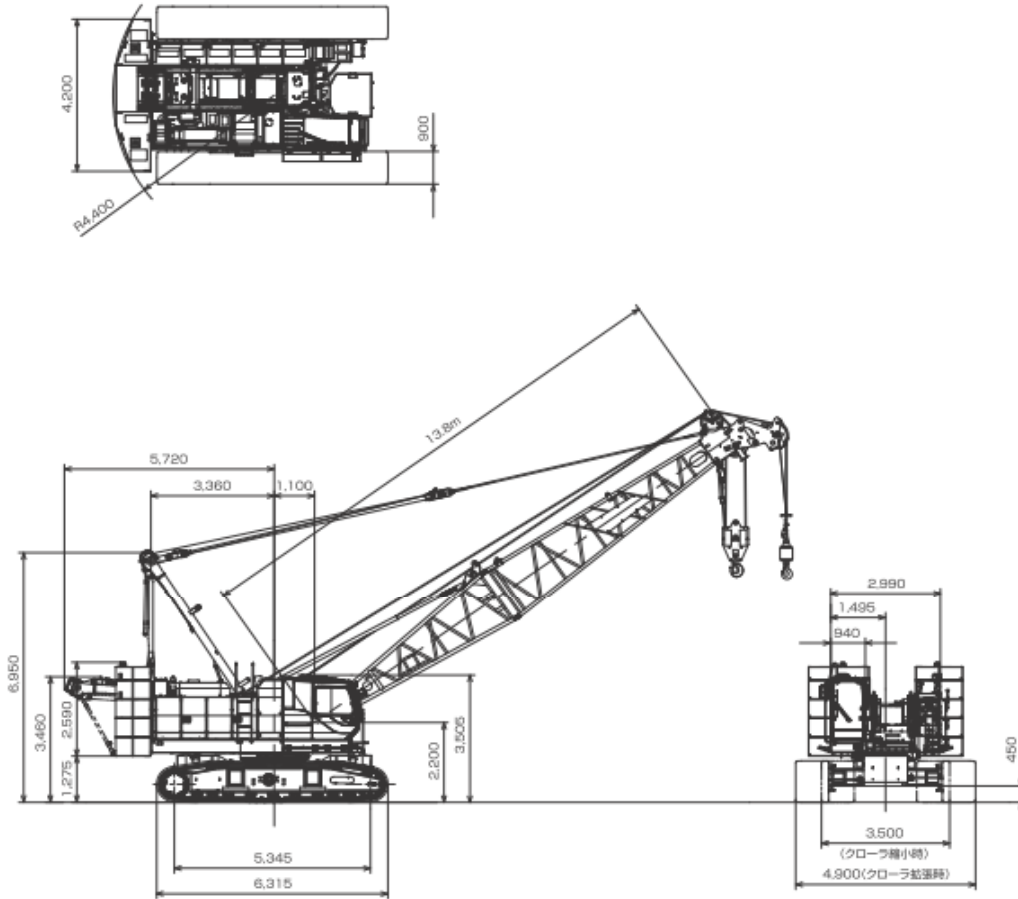

▶主ブーム定格総荷重表

(単位: t)

ブーム長さ (m) 作業半径	13.8	16.9	19.9	23.0	26.0	29.1	32.1	35.2	38.2	41.2	44.3	47.3	50.4	53.4	56.5	59.5	62.6	ブーム長さ (m) 作業半径
3.8	100.0																	3.8
4.3	90.0/4.3m	87.5/4.3m	78.0/4.8m															4.3
5.0	74.0	74.0	73.5	70.0/5.4m	61.5/5.9m													5.0
6.0	61.5	61.5	61.5	61.5	61.0	56.8/6.4m												6.0
7.0	51.3	51.1	51.0	50.9	50.8	50.8	50.0	45.0/7.5m										7.0
8.0	42.4	42.2	42.1	42.0	41.9	41.8	41.8	41.7	41.3	37.5/8.5m								8.0
9.0	36.0	35.9	35.7	35.6	35.5	35.5	35.4	35.3	35.2	35.1	34.6/9.1m	31.8/9.6m						9.0
10.0	31.3	31.1	31.0	30.9	30.8	30.7	30.6	30.5	30.4	30.3	30.2	30.1	25.0/10.1m	25.0/10.7m	21.6/11.2m	20.1/11.7m		10.0
12.0	22.0	24.5	24.3	24.2	24.1	24.0	24.0	23.8	23.7	23.6	23.5	23.4	23.3	23.2	19.5	19.4	18.0/12.2m	12.0
14.0	16.7/13.2m	20.1	19.9	19.8	19.7	19.6	19.5	19.4	19.2	19.2	19.0	18.9	18.9	18.7	18.6	18.0	15.4	14.0
16.0		14.8/15.8m	16.8	16.7	16.5	16.5	16.4	16.2	16.1	16.0	15.9	15.7	15.7	15.5	15.4	15.0	14.5	16.0
18.0			13.6	14.3	14.2	14.1	14.0	13.8	13.7	13.7	13.5	13.4	13.3	13.2	13.0	12.9	12.7	18.0
20.0			12.5/16.5m	12.5	12.4	12.3	12.2	12.0	11.9	11.8	11.6	11.5	11.5	11.3	11.2	11.0	10.9	20.0
22.0				11.1/21.1m	10.9	10.8	10.7	10.5	10.4	10.3	10.2	10.0	10.0	9.8	9.7	9.6	9.4	22.0
24.0					8.8/23.9m	9.6	9.5	9.3	9.2	9.1	9.0	8.8	8.8	8.6	8.5	8.4	8.2	24.0
26.0						8.7	8.5	8.3	8.2	8.1	8.0	7.8	7.8	7.6	7.5	7.3	7.2	26.0
28.0						8.0/26.4m	7.7	7.5	7.4	7.3	7.1	7.0	6.9	6.8	6.6	6.5	6.3	28.0
30.0							7.3/29.0m	6.8	6.7	6.6	6.4	6.3	6.2	6.0	5.9	5.8	5.6	30.0
32.0								6.3/31.7m	6.1	6.0	5.8	5.6	5.6	5.4	5.3	5.1	5.0	32.0
34.0									5.5	5.4	5.2	5.1	5.0	4.8	4.7	4.6	4.4	34.0
36.0									5.5/34.3m	4.9	4.8	4.6	4.5	4.4	4.2	4.1	3.9	36.0
38.0										4.7/37.0m	4.3	4.2	4.1	3.9	3.8	3.7	3.5	38.0
40.0											4.0/39.6m	3.8	3.7	3.6	3.4	3.3	3.0	40.0
42.0												3.5	3.4	3.2	3.0	2.9	2.6	42.0
44.0												3.5/42.2m	3.1	2.9	2.7	2.5		44.0
46.0													3.0/44.9m	2.5				46.0

*表中の太線で囲まれた部分は、ブーム等の強度によって定められた値です。